



Easy to lay instructions:


Step 1. Excavate a trench approximately 12 inches wide by 4 to 6 inches deep. Compact soil and add at least 1" of sand. If base soil won't compact use road gravel and compact. Make sure trench bottom is level and hard.

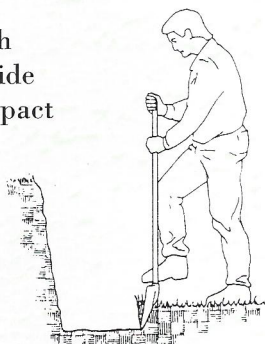

Step 2. Lay base course with lip down and to the back. Using a rubber mallet, level block front to back and side to side. As you add other blocks, level to adjacent blocks. A big help is to stretch a string to keep units in a straight line. You may curve in and out or in a circle.

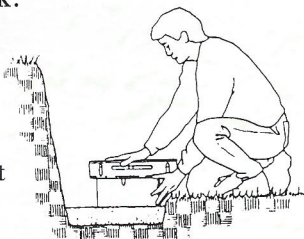

Step 3. Place next courses so the lip overhangs on the back side. Be sure you move in one half block so blocks are staggered and do not stack up in a straight line.

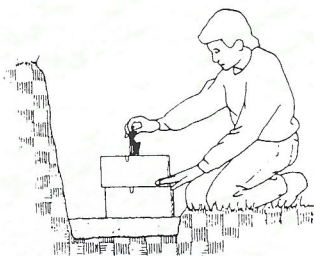

Step 4. Sometimes to achieve a sharp curve you may want to chip part of the lip off of each side of the block. Do Not chip all of the lip off.

Step 5. Back fill as you go. For best results, place about 6" of gravel directly behind the wall.

